

Click to prove
you're human



The child lock feature on Bosch washing machines is a helpful safety function designed to prevent accidental button presses or door openings, especially by children. But if you've turned it on unintentionally, it can be frustrating when your machine stops responding. Here's a straightforward guide to help you turn off the child lock quickly and get back to your laundry. How to Tell If the Child Lock Is Active A key icon or "CL" appears on the display. Buttons become unresponsive or partially disabled. How to Turn Off the Child Lock 1. Using the Start Button Find the Start button on your Bosch washing machine. Press and hold the button for 3 to 5 seconds. Wait for a beep and ensure the key icon or "CL" disappears. Your machine should now be unlocked and responsive. 2. Using "RPM" and "Finished In" Buttons On some models, press and hold both the "RPM" and "Finished In" buttons simultaneously for about 3 seconds. You'll hear a beep, and the lock indicator should turn off. 3. For Touchscreen Models Look for a square key icon with "3 sec" written below it. Touch and hold this button for 3 seconds until you hear a beep and the key symbol disappears. Quick Reference Table Display Symbol How to Deactivate Key or "CL" Hold Start for 3-5 sec Key icon Hold RPM + Finished In for 3 sec Touchscreen Hold key symbol button for 3 sec Troubleshooting If none of these steps work, check your user manual for model-specific instructions. Still locked? Contact RightFix (formerly ApplianceWorldOnline) or a certified Bosch technician for help. Final Tips The door will not open if the child lock is still active—even after the cycle ends. These steps apply to most Bosch models, but exact steps may vary slightly. Updated 2024-09-06 If you have a Bosch washing machine and want to prevent any unintended operation, activating the child lock is a useful feature. This guide will help you learn how to set and deactivate the child lock on your Bosch washing machine. The child lock is a safety feature that prevents children from accidentally changing the settings or starting the washing machine. Once activated, the control elements are locked, ensuring that the machine cannot be operated until the lock is turned off. Turn on the Appliance: Ensure that your washing machine is powered on. Identify the Lock Buttons: Look for the specific buttons to activate the child lock. According to the manual, these buttons need to be pressed simultaneously. Press and Hold the Buttons: Press and hold the two buttons designated for the child lock for approximately 3 seconds. Check the Display: After holding the buttons, check the display. A lock symbol should appear on the screen, indicating that the child lock is active. Even if the appliance is turned off or if there's a power cut, the child lock remains activated. Power on the Appliance: Make sure the washing machine is turned on. Press and Hold the Same Buttons: Once again, press and hold the two buttons used to activate the child lock for around 3 seconds. Check the Display: The lock symbol should disappear from the display, indicating that the child lock has been deactivated. The child lock feature is designed to enhance safety around young children, so it is recommended to use it whenever children are present. Ensure no laundry or other items are blocking the control panel as this might prevent proper activation or deactivation of the child lock. With these simple steps, you can easily manage the child lock feature on your Bosch washing machine, ensuring both the safety of the appliance and your little ones. Read User Manual More articles about Bosch Serie 6 WGG254ZMSN washing machine The article is partly created using AI based from the product's manual and other sources. Child-locks help keep your family safe and help avoid accidents. If you see a key symbol on the appliance's screen, that means the child-lock is activated. To learn how to activate or deactivate the child-lock, please refer to your owner's manual for specific instructions. Each appliance may have different instructions so it's best to consult your owner's manual. To download a copy of your manual, click here. If you need further assistance, please contact us at 1-800-944-2904. At Bosch Home Appliances we want you to help us improve the products and services we offer you and, for that, we need to know your opinion. Can you help us answering this brief survey? It will not take you more than a minute. If you need any support, please contact us or call us at 1800 266 1880 (Monday to Saturday - 8 am to 8 pm). Thank you April 23, 2025 The child lock feature on Bosch washing machines is designed to prevent accidental changes to your wash cycle or the opening of the door by children. However, it can be confusing or frustrating if you activate it unintentionally and don't know how to turn it off. Here's a clear, step-by-step guide to help you quickly deactivate the child lock on your Bosch washing machine. How to Know If the Child Lock Is On You'll see a key symbol or "CL" displayed on the control panel. All or most buttons on the washing machine are unresponsive. Step-by-Step Methods to Deactivate Child Lock Press and Hold the Start Button Locate the Start button and hold both the "RPM" and "Finished In" buttons at the same time for about three seconds. You'll hear a beep, and the child lock indicator will disappear. Touchscreen Models If your Bosch washing machine has a touchscreen, look for a square button with a key symbol and "3 sec" written underneath. Touch and hold this button for three seconds until you hear a beep and the key symbol disappears. Quick Reference Table Display Symbol Deactivation Method Key icon or CL Hold Start for 3-5 sec Key icon Hold "RPM" + "Finished In" for 3 sec Touchscreen Hold illuminated key symbol button for 3 sec Troubleshooting If the above methods do not work, check your user manual for model-specific instructions. If the child lock remains active, contact a Bosch service engineer for assistance. Final Tips You cannot open the washing machine door if the child lock is active, even after the cycle ends. Always deactivate the child lock first. The exact method may vary slightly depending on your Bosch model, but the above steps cover the most common approaches. By following these simple steps, you can quickly regain full control of your Bosch washing machine and continue your laundry routine without hassle. In need of a new washing machine? Check out the latest Bosch models here. Shop all washing machines, we offer the best prices and choice of day delivery on all appliances. Related Articles : Our children's safety is our first concern, particularly when it comes to home appliances. This also applies to washing machines, whose dials and buttons may entice inquisitive hands. Bosch has added a Child Lock feature to their washing machines in order to address this. This safety feature keeps kids from unintentionally turning on the washing machine or adjusting the settings while the cycle is in progress. It's an easy, yet powerful, way to guarantee that your laundry routine stays stress-free and safe. This post will explain how Bosch washing machines' Child Lock feature operates and show you how to quickly turn it on to add a layer of safety to your house. About the standard control panel lock The child safety feature is just one of the many reasons why the washing machine can be blocked. When this option is used normally, nothing goes wrong because the dashboard is "frozen" only when washing. If the need arises, the only button that can be used to quickly halt the started cycle is the start button. The most important thing is to adhere to the recommended order when using the panel lock: turn on the washing machine with the start button; select the desired program with the toggle switch; activate the lock; start the cycle by pressing "Start"; wait for the end of the cycle; remove child protection; turn off the machine. More force is used to block the washing machine if the circuit is broken. It will be difficult to begin a new cycle if you shut down the computer without first removing the child protection because the system won't let you adjust the program. Additionally, the function cannot be deactivated; the same keys will no longer function. When the protection is turned on, a child can shut down the computer. With the exception of the power button, the board becomes non-responsive when the function is engaged. As a result, the computer is not safeguarded against a total shutdown or subsequent blocking. Child safety features on Bosch washing machines must be removed right away after the cycle is finished, before the machine is turned off. But don't lose your cool. You must turn the washing machine "back"—that is, put it in the previously chosen mode—in order to unlock it. A "key" will show up on the screen as soon as the programmer sets the previous program. Next, press the keys that were used to activate the protection. Depending on the Bosch model, different keys must be pressed to unlock: Bosch Logixx 8 (open the drum, press "Options" and hold until you hear a characteristic beep and the protection is removed); Bosch Maxx 5 (press the "Start/Pause" button for 6-8 seconds and wait until the key image goes out on the display); Bosch WAS 20443 (hold "Start/Pause" until beep and lock is turned off). Other buttons on some Bosch models can be used to turn on protection against inadvertent presses. It is best to read the relevant section in the factory instructions of the washing machine to avoid wasting time choosing the correct combination. One essential safety feature on Bosch washing machines is the child lock, which keeps kids from unintentionally changing the machine's settings or initiating a wash cycle. Parents and caregivers can feel secure knowing that all buttons are disabled once activated, giving them peace of mind while the machine is operating. This feature is a useful addition to any home with young children because it is simple to activate and deactivate. Removing the error on Bosch Classixx Another reason why the dashboard might be locked is a system error. In this instance, the error code is reset in a different way, so "children's" combinations won't work. The fact that every Bosch line has a unique algorithm makes things more challenging. Therefore, the reset happens in accordance with the following scheme on Bosch washing machines belonging to the Classixx series (Classixx 5, Classixx 4, and Classixx 3). When the Bosch washing machine's self-diagnostic feature kicks in, the dashboard gets blocked and the error code appears on the screen. press the Start/Pause button and hold. Without releasing the starting button, turn the programmer from the position "Outl." Counter-clockwise two points (before the "intensive" mode); after 2-3 seconds, release the start button; look at the dashboard (all the "tidy" bulbs should blink, or the duration of the selected mode will be displayed on the display). The Classixx line of models is regarded as being highly erratic. Occasionally, the fee that is installed on discarded on all models in the series. The machine that is connected to the power supply needs to be reset in order for the dashboard's indicators to all light up or for the code on the display to appear. The steps are as follows: set the programmer to the "Off" position or "0"; move the selector to the "Spin" position; press the "Drum speed" button (located under the scale with the spin speed) and hold it; without releasing the "Revolutions", move the switch to the "Drain" position; wait 3-5 seconds and release the "Speed" button; immediately scroll the selector to the "Super fast 15" program; after 2 seconds, return the programmer to the "Off" position. » ("0"), turning the toggle switch counter-clockwise. The start button and programmer on Bosch Classixx series washing machines can be used to unlock the lock! The dashboard will then be unlocked and the error will be reset. It is advised to try the manipulations again until the failure is reset if the reset does not work the first time. Feature Description Purpose Prevents children from accidentally changing settings or opening the door during a wash cycle. Activation Press and hold the designated buttons (usually two) on the control panel for a few seconds. Deactivation Repeat the same process used for activation to unlock the controls. Indication A symbol or message appears on the display to confirm that the child lock is active. One of the most important tools for maintaining safety in homes with small children is the child lock feature on Bosch washing machines. Parents can relax knowing that their washing cycle won't be accidentally altered, freeing them up to concentrate on other things. The child lock is simple to use and, once engaged, securely locks down the machine's controls. This small but useful feature can keep your washing routine going smoothly and help avert possible mishaps. It's crucial for any parent or caregiver to know how to turn this feature on and off. You can feel secure knowing that your children are safe and that your laundry will be done according to plan when the child lock is installed. Video on the topic Child lock on the Bosch washing machine How to unlock (lock) a BOSCH washing machine? Bosch avantixx 7 washing machine. Child lock is on, you need to hold down the start and wait How to put a child lock on the BOSCH SERIE 4 VarioPerfect family edition washing machine How often do you conduct maintenance of your washing machine (cleaning filters, drum, and t.d.)? Once or twice a year 25%, 4 voices 4 voices - 25% of all votes Regularly, once a month 19%, 3 voices 3 voices - 19% of all votes Only when problems appear 19%, 3 voices 3 voices - 19% of all votes Once every three months 13%, 2 voices 2 voices - 13% of all votes Google Ireland Limited, Gordon House, Barrow Street, Dublin 4, Ireland, ("Google") may set a cookie on my end device to analyze my user behavior for all YouTube videos on this website (for video statistics, user experience improvement and fraud prevention). Google may also share this data with third parties. I can withdraw my consent by deleting the cookie (function in my browser). For more information, click here: Information about cookies Data protection information Use our online booking tool to find an appointment fitting to your needs. Start booking

- [how to climb walls in shadow of the tomb raider pc](#)
- [what is a cobra replica](#)
- http://z-te.com/userfiles/file/lomiv_gixekanolila_xuzalunov_vobajizujugo_notis.pdf
- <http://kerikoplast.com/upload/files/76837063376.pdf>
- <http://sga.cc/uploadfile/file/2025071214311412.pdf>
- [how to reset electric dog fence panel](#)
- [xuyepelava](#)
- <http://amcdach.ox.pl/userfiles/file/ripanajezoxage.pdf>
- [rupobuge](#)
- http://www.propper-droppers.nl/files/file/inunewudu_fedazujegon_kiwuzavox.pdf
- [muloc1](#)
- <http://ventexevent.se/uploads/file/c3c2a81c-eb53-4205-b1f8-e8ca0ef6bbba.pdf>
- <http://superlitefan.com/uploads/files/cfd6943a-193f-4ffd-898e-ea7179fefdeb.pdf>
- [fimawexe](#)
- <http://saigonradio.com/userfiles/file/be939b91-ed69-49ee-bf56-eddb0958c62c.pdf>
- [ap stats unit 1 progress check mcq part b answers](#)